

Monkey MOMETER PRO

FACIAL RECOGNITION • ACCESS CONTROL



QUICK START GUIDE

INTRODUCTION

The *Monkey* **MOMETER PRO** has been specifically developed to help Australian workplaces take the necessary steps to ensure only the right people have access to your site .

With accurate, contactless face scanning and the option of activating personal registration and access control, it's the perfect solution for offices, hotels, buildings, schools, shops, cafés and restaurants, as our communities open up to more patronage and use.


NOTES:

1. Do not splash liquid or metal on the outer screen to avoid scratches or damage.
2. Clean with appropriate glass-cleaning solution to avoid watermark.
3. Take care when installing. Please handle the unit gently and don't drop it. Surprisingly, it doesn't handle that too well.
4. Please ensure that the equipment is well grounded to avoid interference and damage to the video and audio signals.
5. Please don't plug audio equipment, alarms and other external interfaces or terminals directly to the unit.
6. The Monkey Mometer Pro works best in room temperature between -10°C and $+55^{\circ}\text{C}$ and relative humidity between 10% - 90%. But if you're working somewhere the room temperature is below 0°C or above 30°C you should seriously consider looking for another job.
7. This product is for indoor use only. Not weather/waterproof.

TO BUILD YOUR STAND:

**THE STAND HAS THREE MAIN PARTS: A BASEPLATE AND TWO UPRIGHT POSTS.
(YOU SHOULD ALSO HAVE A POWER CABLE, TWO BACK PLATES, A LARGE SPACER RING AND 20 BOLTS)**

STEP 1

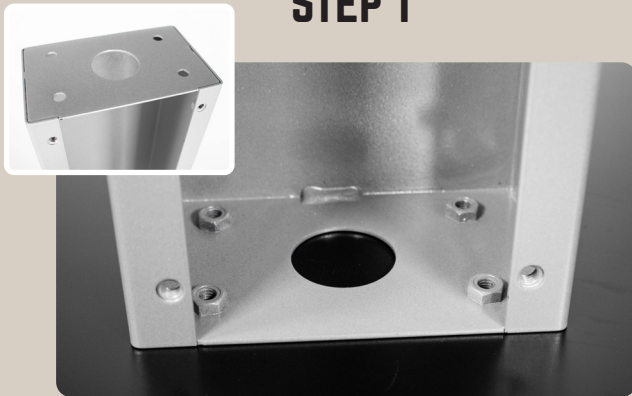

The upright posts have four holes in each end. One of those ends has hexagonal nuts on the inside.

That's the bottom.

STEP 2



Attach the baseplate to one of the posts using four of the supplied bolts. Screw them in by hand then tighten with a 10mm spanner or drill.

STEP 3



Carefully place the other post on top and attach the bolts.

TO ATTACH YOUR MONKEY MOMETER PRO:

STEP 1



Loosen the large nut at the bottom of the *Monkey MOMETER PRO* and remove it.

STEP 2



Feed the cords through the hole at the top of your stand one at a time until all are through.

STEP 3



Feed the chords through the spacer ring and large nut.

STEP 4



Tighten the nut as much as you can by hand. If you like, you can tighten further with a large adjustable wrench.

STEP 5



Feed the power cable through the bottom mail slot on one of the back plates. Then feed the cable up through hole between the posts and connect it to the *Monkey MOMETER PRO'S* power cable.

STEP 6



Affix the two back plates using your remaining bolts.

TO START USING:

STEP 1



Place the stand....

STEP 2



Plug the plug into a standard wall socket.

If you use an extension lead, ensure it is taped down so no one trips over it.

STEP 3



The *Monkey* **MOMETER PRO** will power up within 10 seconds of being plugged in.

For best results wait a few minutes before using.

STEP 4



Place the floor decal 50cm away from the front of the stand.

STEP 5



You're good to go!

STEP 6

The *Monkey* **MOMETER PRO** will tell you if something is wrong – like if you need to stand closer to or further away from the unit, or if you need to clear things away from your face for a more accurate recognition.

CONNECTOR INTERFACE INTRODUCTION



1. USB	5V DM DP GND
2. Access Control (output)	A and B Normal open, default normal open, identification passed-connection, (alarm output 2) C and D Normal close, default normal close, identification passed-disconnection, (alarm output 2)
3. Reset Key	Hard reset
4. Power Connector	DC 12V
5. Alarm Output	GND+ALMO alarm output 1, without action output 3.3V, with action output 0V
6. Wiegand Connector	-WG10 +WG11 (input)
7. RJ45	100M

EASY TO ORDER ONLINE WITH 30 DAY MONEY-BACK GUARANTEE

For all trade and bulk enquiries contact:

JASON BIDDELL
JASON@MAMMOTH-INNOVATION.COM
0404 030 366

BLAINE COATES
BLAINE@MAMMOTH-INNOVATION.COM
0409 099 819

This guide has been put together by combining a translation of the manufacturer's original instructions with our own practical use and testing. The information contained within this document provides the user with all the practical information required to safely set-up and operate the *Monkey* **MOMETER PRO**. Without written permission, no unit or individual may in any way extract, copy, translate or modify all or part of this manual. Except as otherwise agreed, we do not make any representations or warranties, express or implied.



Level 1, 527 Chapel Street, South Yarra. Vic. Australia 3141
For terms and conditions, and to order online visit
MONKEYVISION.COM.AU